

VI.5.3D-BASEPER PROGRAM FCST HCL TECHNIQUE BASEPER

Purpose

Technique BASEPER sets whether a base period analysis is to be performed for the observed values.

Valid values are NO (0) and YES (1).

The Global default value is NO (0).

This Technique is Universal.

This Technique has 2 Arguments which are the initial year to be used for the base period and the last year to be used for the base period.

Form of Input

```
BASEPER inityear lastyear
```

```
    where inityear is the initial year of the base period
           lastyear is the last    year of the base period
```

Example

```
BASEPER 1950 1975
```

A base period analysis will be performed for the observed values for water years 1950 through 1975.